




# BOOT LINER PLANS

## Pg 1

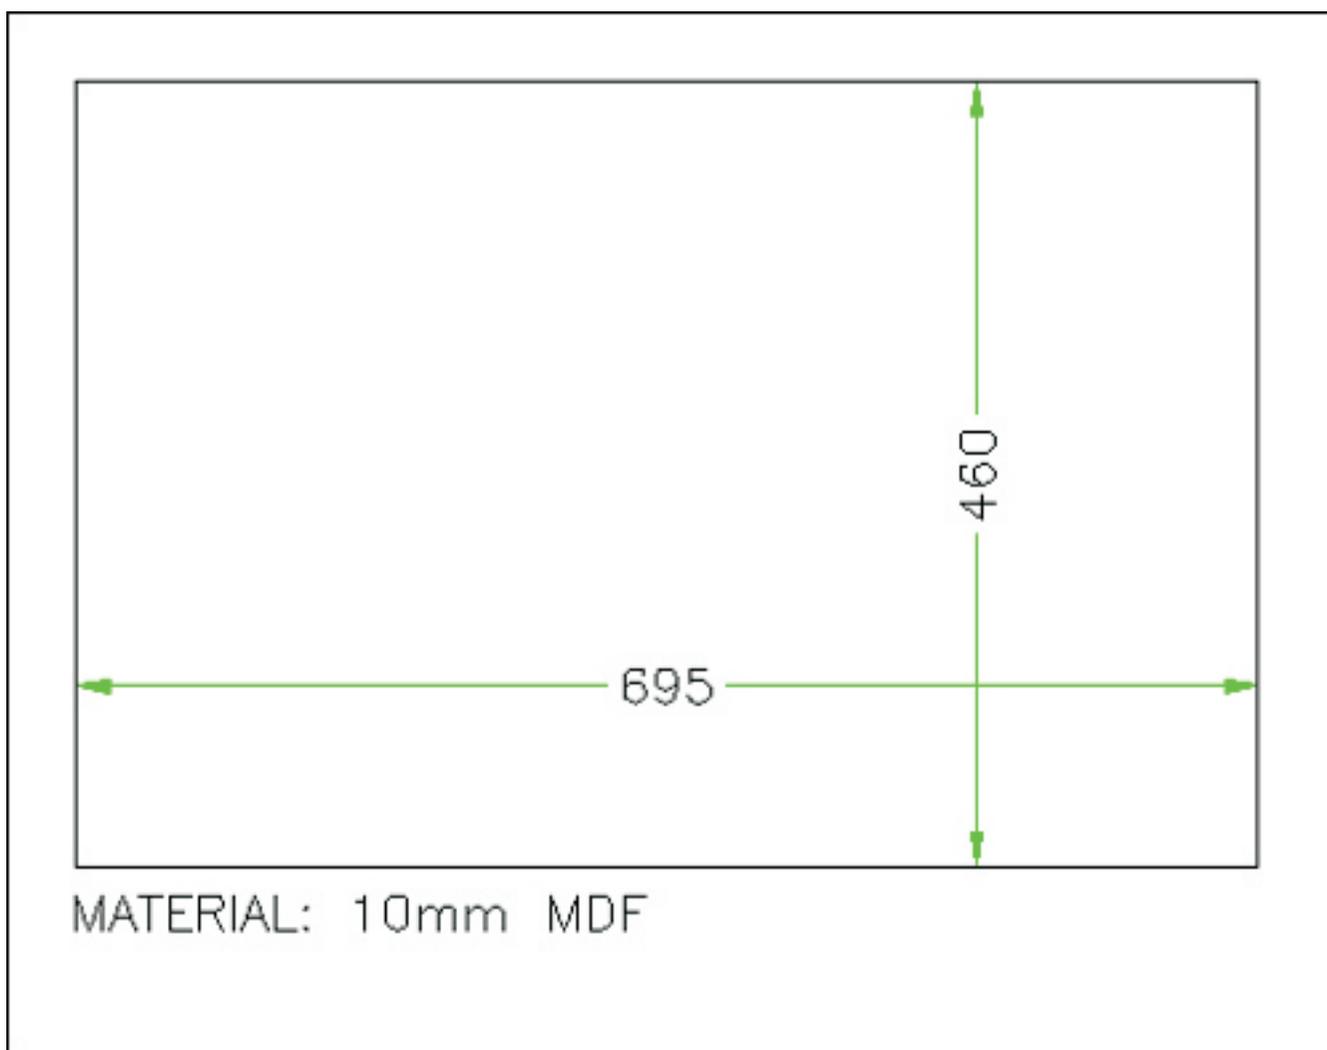


ALL MEASUREMENTS ARE IN mm.  
BACK BULKHEAD PIECE





Pg 2

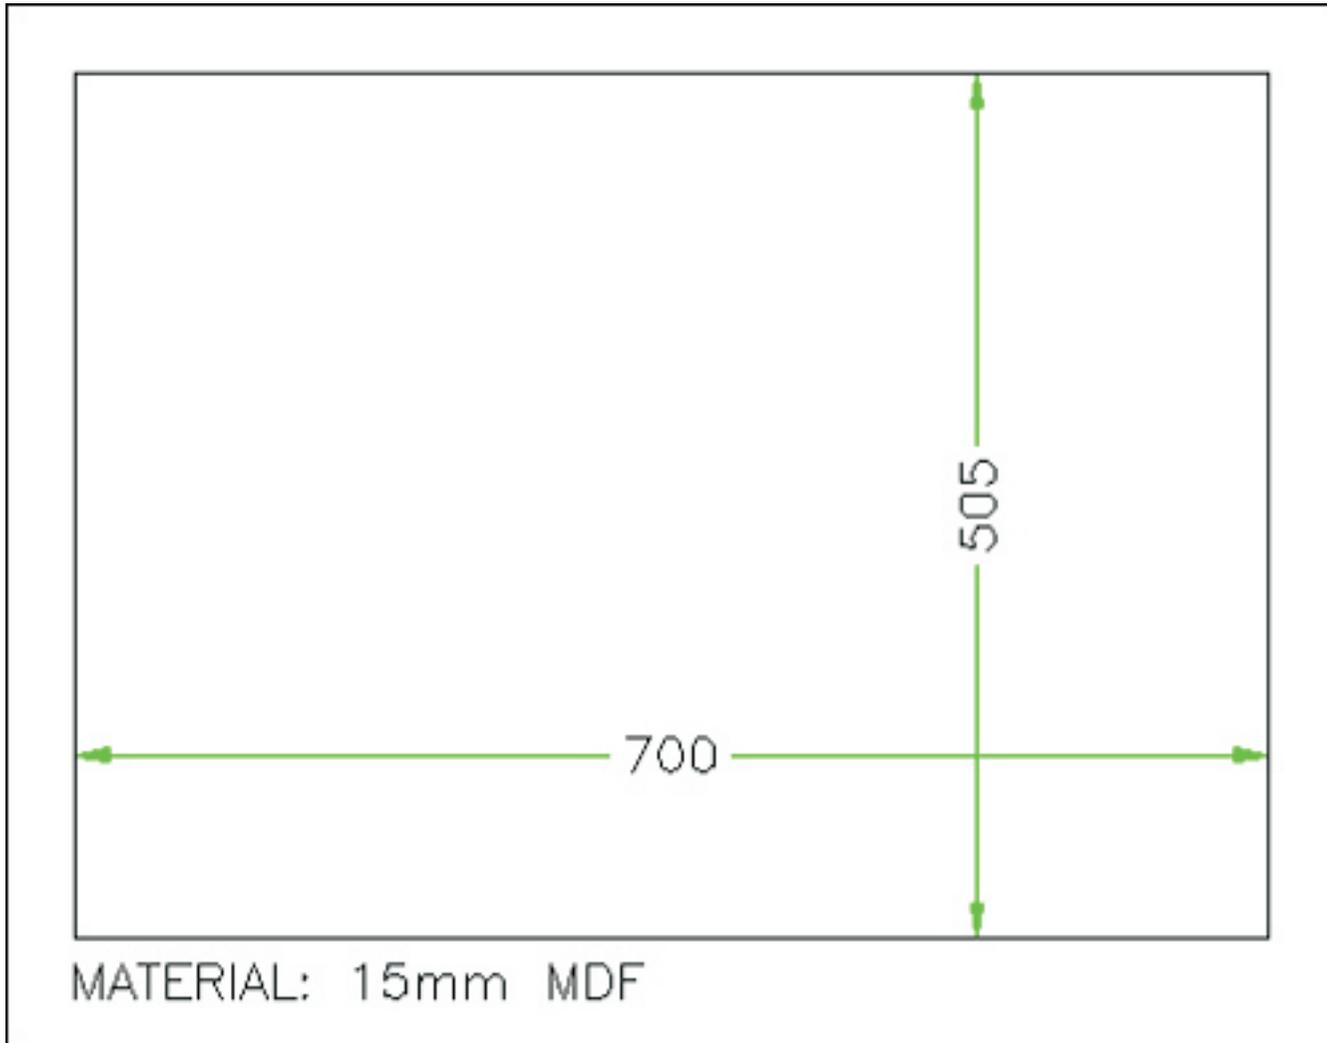


BOOT FLOOR PIECE






Pg 3

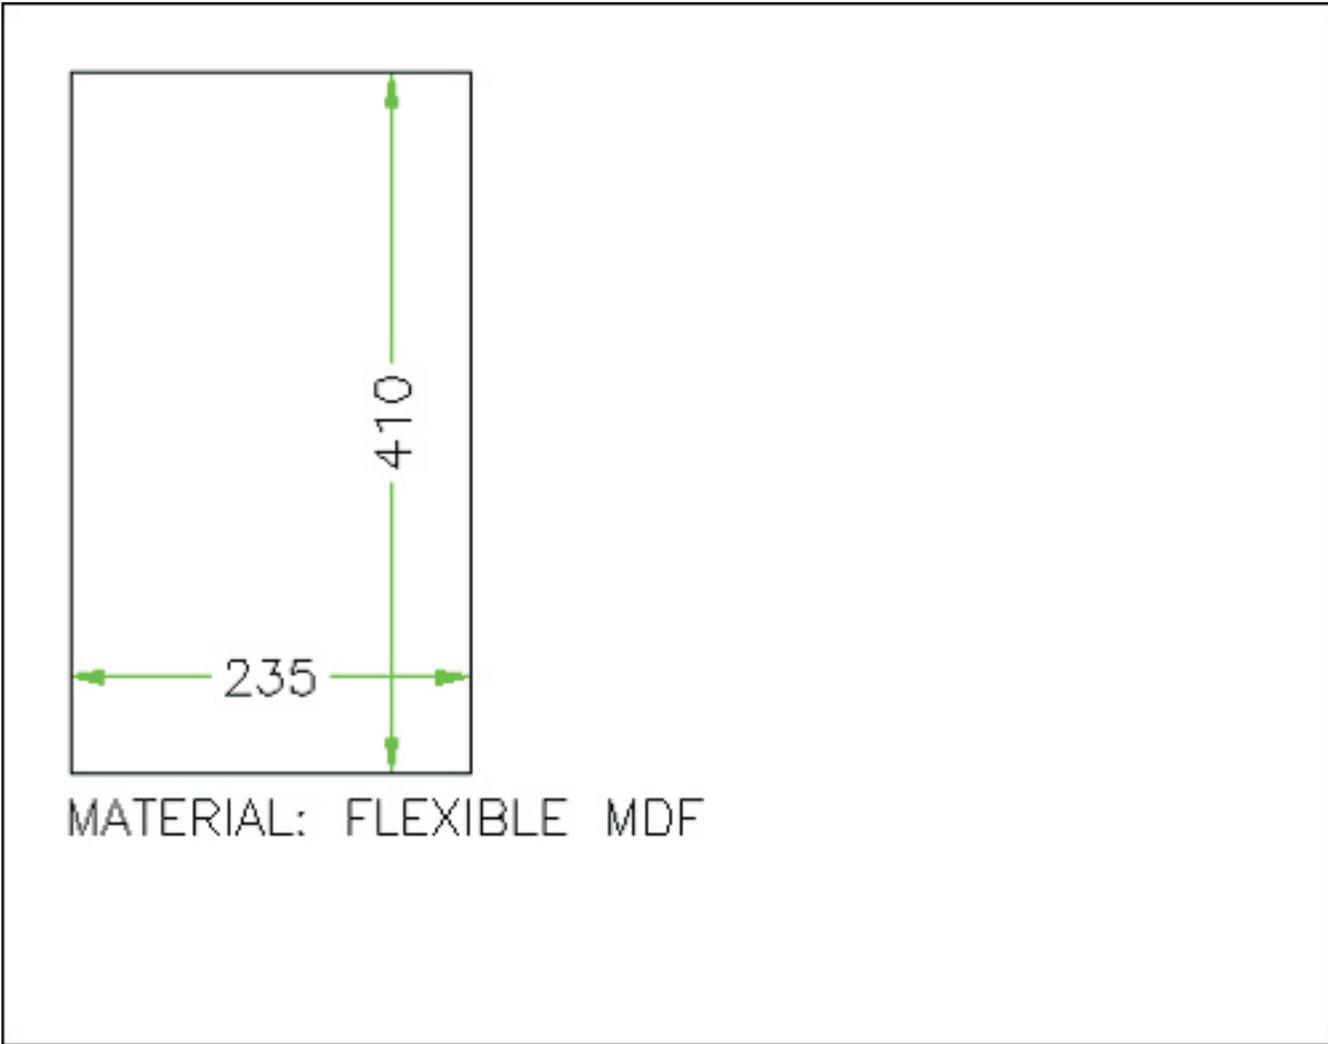

FUEL TANK FRONT COVER



# Pg 4

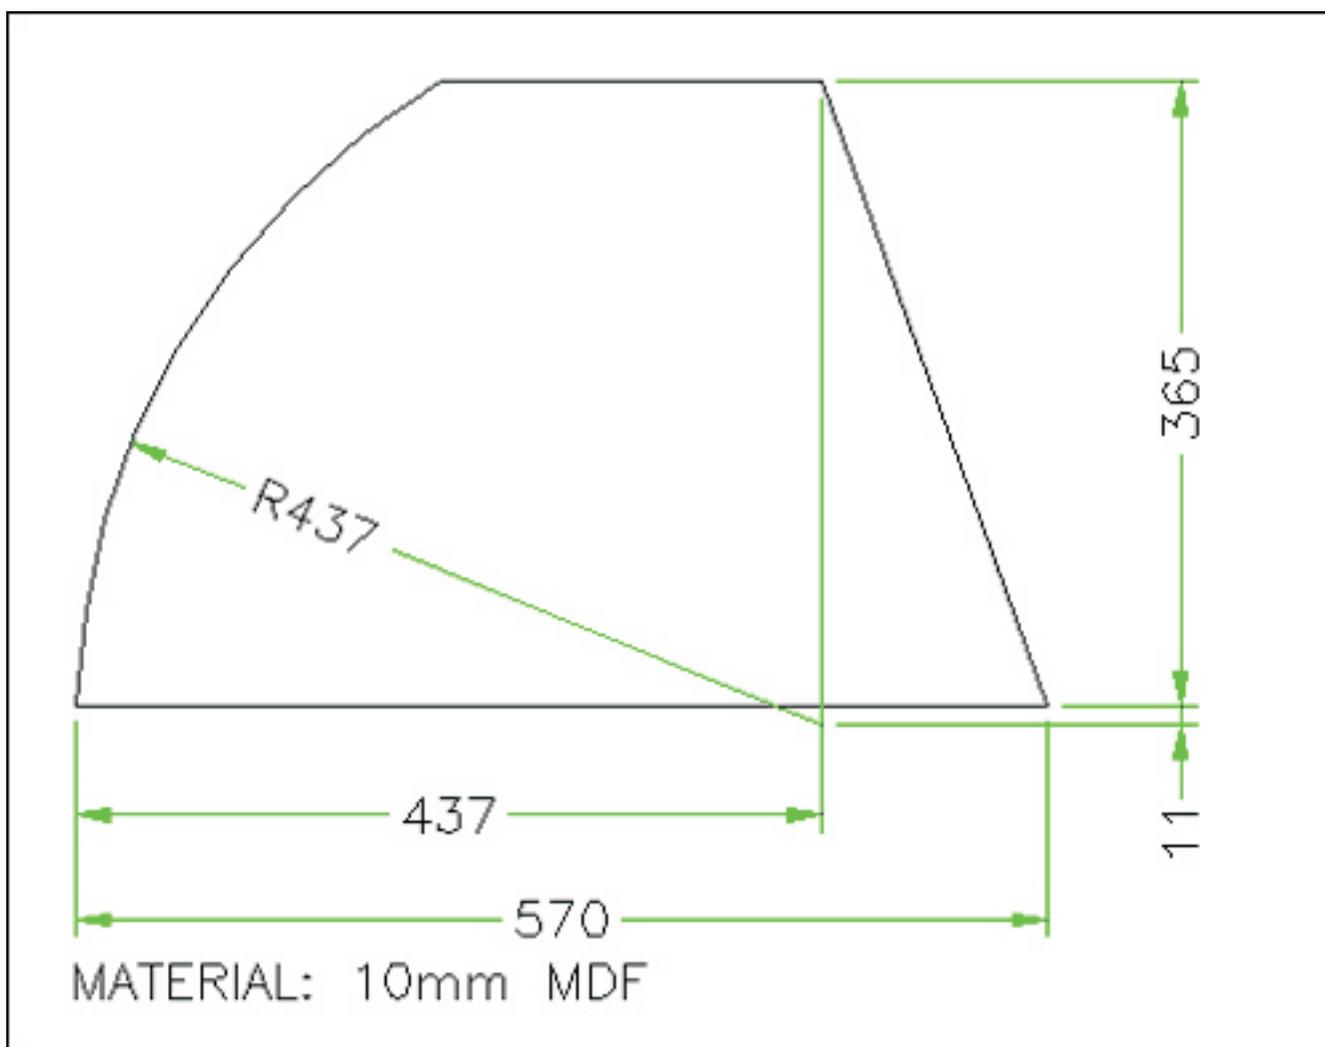

**2 X SIDE PIECES**  
**“YOU REQUIRE TWO OF THESE”**  
NOTE: As the Boot Floor Piece sits on the spare wheel you will require a piece of wood/packing 65 mm tall to make the boot piece look and sit level.